

Trimble TX8 3D Laser Scanner

Version 1.00
Revision B
November 2014



Corporate Office

Trimble Navigation Limited
935 Stewart Drive
Sunnyvale, CA 94085
USA
www.trimble.com

GeoSpatial business area

Trimble Navigation Limited
GeoSpatial business area
10355 Westmoor Drive,
Suite #100
Westminster, CO 80021
USA
800-538-7800 (toll free in USA)
+1-937-245-5600 Phone
+1-937-233-9004 Fax
<http://www.trimble.com/support/>

Legal Notices

© 2014, Trimble Navigation Limited. All rights reserved.
Trimble, the Globe & Triangle logo, and RealWorks are trademarks of Trimble Navigation Limited, registered in the United States and in other countries.
All other trademarks are the property of their respective owners.

Release Notice

This is the November 2014 release (Revision B) of the Trimble TX8 3D Laser Scanner User Guide. It applies to version 1.00 of the 3D Laser Scanner.

Product Limited Warranty Information

For applicable product Limited Warranty information, please refer to the Limited Warranty Card included with this Trimble product, or consult your local Trimble authorized dealer.

Notices

USA

Class B Statement – Notice to Users. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules and Part 90. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission rules.

Canada

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Europe



The Product has been tested and found to comply with the requirements for a Class B device pursuant to European Council Directive 2004/108/EC on EMC.

The Product complies with European Council Directive 2006/42/EC on Machinery and European Council Directive 2011/65 (RoHS).

Australia and New Zealand



This product conforms with the regulatory requirements of the Australian Communications and Media Authority (ACMA) EMC framework, thus satisfying the requirements for RCM Marking and sale within Australia and New Zealand.

Taiwan – Battery Recycling Requirements



The product contains a removable Lithium-ion battery. Taiwanese regulations require that waste batteries are recycled.
廢電池請回收

Waste Electrical and Electronic Equipment (WEEE)



For product recycling instructions and more information, please go to www.trimble.com/Corporate/Environmental_Compliance.aspx.
Recycling in Europe: To recycle Trimble WEEE (Waste Electrical and Electronic Equipment, products that run on electrical power.), Call +31 497 53 24 30, and ask for the “WEEE Associate”. Or, mail a request for recycling instructions to:
Trimble Europe BV
c/o Menlo Worldwide Logistics
Meerheide 45
5521 DZ Eersel, NL

FCC Declaration of Conformity

We, Trimble Navigation Limited.

935 Stewart Drive
PO Box 3642
Sunnyvale, CA 94088-3642
United States
+1-408-481-8000

Declare under sole responsibility that DoC products comply with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

EC Declaration of Conformity

We, Trimble (MENSI S.A.S.)

174 avenue du Maréchal de Lattre de Tassigny
94120 Fontenay-sous-Bois
France

Declare under sole responsibility that the product, Trimble TX8, part number 28000034 is in conformity with the following European standards:

Electromagnetic Compatibility:

Standard NF EN 61326-1 (July 2006)

In compliance with EMC Directive 2004/108/EC.

In compliance with Machinery Directive 2006/42/EC.

In compliance with RoHS Directive 2011/65 (RoHS).

Environment: Electrical equipment for measurement, control and laboratory use

Conformity has been demonstrated on one production representative sample. Conformity to EMC standards of each manufactured unit is ensured by implementation of internal documented procedures.

Declaration of Conformity (laser performance)

This is to certify that 3D scanner model
Trimble TX8
complies with the performance requirements of

IEC 60825-1⁽¹⁾

and

US FDA 21 CFR §1040.10⁽²⁾

as a Class 1 laser device.

⁽¹⁾ IEC 60825-1: 2007 Edition 2.0. Safety of laser products - Part 1: Equipment classification and requirements. IEC, Geneva.

⁽²⁾ Federal Performance Standard for Laser Products, 21 §CFR 1040.10, Center for Devices and Radiological Health, Silver Springs, Maryland, USA.

Safety Information

Before you use your Trimble product, make sure that you have read and understood all safety requirements.



WARNING – This alert warns of a potential hazard which, if not avoided, could result in severe injury or even death.



CAUTION – This alert warns of a potential hazard or unsafe practice that could result in minor injury or property damage or irretrievable data loss.

Note – *An absence of specific alerts does not mean that there are no safety risks involved.*

Use and care

This product is designed to withstand the rough treatment and tough environment that typically occurs in construction applications. However, the scanner is a high-precision electronic instrument and should be treated with reasonable care.

Also see, [Care and maintenance, page 17](#).



CAUTION – Operating or storing the instrument outside the specified temperature range can damage it.

Laser safety

This is to certify that the 3D scanner model, Trimble TX8, complies with the performance requirements of IEC 60825-1¹ and US FDA 21 CFR §1040.10² as a Class 1 laser device.

Hazard label



This label is placed on each side of the instrument. It warns you to keep your hands away from moving parts when the instrument is rotating. Failure to follow the instruction may cause injury to yourself or damage to the instrument.

¹IEC 60825-1: 2007 Edition 2.0. Safety of laser products - Part 1: Equipment classification and requirements. IEC, Geneva.

²Federal Performance Standard for Laser Products, 21 §CFR 1040.10, Center for Devices and Radiological Health, Silver Springs, Maryland, USA.

Class 1 Laser Product label



The TX8 3D scanner complies with the performance requirements of international standard IEC 60825-1 2007 as a CLASS 1 LASER PRODUCT and is therefore labeled as follows in accordance with the requirements of this standard. The Laser Warning Label is placed on the bottom and back of the instrument.

The TX8 3D scanner operates in a laser wavelength of 1,5 μm (invisible light), with a beam divergence of 0.177 mrad Gaussian and an output laser power of 6 kW peak.

Battery safety



WARNING – Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire, and can result in personal injury and/or property damage.

To prevent injury or damage:

- Do not use or charge the battery if it appears to be damaged. Signs of damage include, but are not limited to, discoloration, warping, and leaking battery fluid.
- Do not expose the battery to fire, high temperature, or direct sunlight.
- Do not immerse the battery in water.
- Do not use or store the battery inside a vehicle during hot weather.
- Do not drop or puncture the battery.
- Do not open the battery or short-circuit its contacts.



WARNING – Avoid contact with the rechargeable Lithium-ion battery if it appears to be leaking. Battery fluid is corrosive, and contact with it can result in personal injury and/or property damage.

To prevent injury or damage:

- If the battery leaks, avoid contact with the battery fluid.
 - If battery fluid gets into your eyes, immediately rinse your eyes with clean water and seek medical attention.
- Do not rub your eyes!
- If battery fluid gets onto your skin or clothing, immediately use clean water to wash off the battery fluid.



WARNING – Charge and use the rechargeable Lithium-ion battery only in strict accordance with the instructions.

To prevent injury or damage:

- Discontinue charging a battery that gives off extreme heat or a burning odor.
- Never attempt to remove, replace, or repair the battery yourself.
- If the battery requires attention, send the receiver to an authorized Trimble Service Center.
- Use the battery only in Trimble equipment that is specified to use it.
- Use the battery only for its intended use and according to the instructions in the product description.



WARNING – Charging or using the battery in unauthorized equipment can cause an explosion or fire, and can result in personal injury and/or equipment damage. To prevent injury and damage:

- Do not charge or use the battery if it appears to be damaged or leaking.
 - Charge the battery only in a Trimble product that is specified to charge it.
 - Be sure to follow all instructions that are provided with the battery charger.
 - Discontinue charging a battery that gives off extreme heat or burning odor.
 - Use the battery only for its intended use and according to the instructions in the product documentation.
-



WARNING – Discharge all Trimble batteries before disposing of them. Disposal must be done in accordance with local and national guidelines.

Contents

Safety Information	4
Use and care	4
Laser safety	4
Hazard label	4
Class 1 Laser Product label	5
Battery safety	5
1 Introduction	9
Unpacking the instrument	10
Shipping box	10
Instrument case	11
Removing the instrument from the case	14
Lifting the instrument	16
Transporting the instrument	17
Packing the instrument case into the shipping box	17
Care and maintenance	17
Cleaning	18
Removing moisture	18
Technical support	18
Related information	18
2 Instrument and Accessories	19
Instrument views	20
Front of instrument	20
Back of instrument	21
Left side of instrument	22
Right side of instrument	23
Battery/USB flash drive compartment	24
Accessories	25
External power supply kit	25
USB flash drive	26
Battery kit	26
Two-bay charger	29
3 Setup	32
Setting up the instrument	33
USB flash drive	34
Inserting the USB flash drive	34
Removing the USB flash drive	35
Changing default settings	35
Powering the instrument	36
Using an external power supply	36

Inserting a battery	37
Removing a battery	38
Turning the instrument on and off	39
Turning on the instrument	39
Turning off the instrument	39
4 Software	40
Touch screen	41
Projects	42
Projects	43
Stations	46
Scans	48
Leveling	54
Unleveled	56
Compensator	57
Auto level check	57
Scan Parameters	58
Density	59
Atmospheric correction	60
Settings	63
Date/Time	64
Units	65
USB flash drive	65
Maintenance	67
Personal settings	71
Scanning Face	72
Scan	75
5 Specifications	76
Scanner only specifications	77
Shipping box specifications	77
Instrument case specifications	77
External power supply specifications	77
USB flash drive specifications	78
Battery kit specifications	78
Smart battery specifications	78
Two-bay charger specifications	80
Tribrach specifications	80
Micro fiber lens cleaning cloth specifications	80

Introduction

In this chapter:


- [Unpacking the instrument](#)
- [Transporting the instrument](#)
- [Care and maintenance](#)
- [Related information](#)
- [Technical support](#)

The Trimble® TX8 3D laser scanner is a high-performance laser scanner that rapidly measures angles and distances to create three-dimensional views.

Unpacking the instrument

Shipping box

The TX8 3D scanner is packed inside an instrument case, and the instrument case is transported inside a shipping box. The shipping box is a cardboard box with two foam pads—one on top and one on bottom.

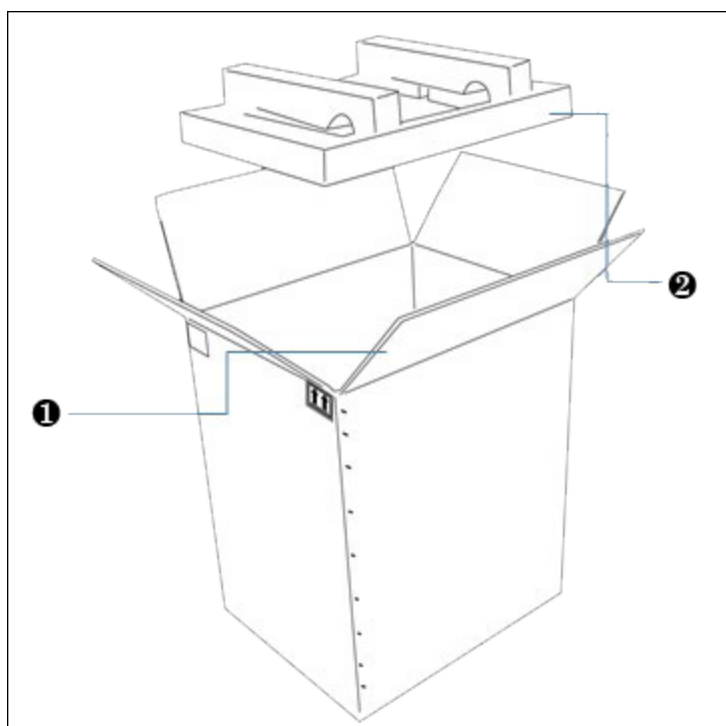

Item	Description
①	Flap
②	Foam pads (x2)

To open the shipping box:

1. Open the seam by cutting the tape or staples.
2. Unfold the four flaps and then remove the top foam padding.

Note – Trimble recommends that you keep the shipping box and its foam padding in case you need to transport the instrument; the box and foam padding provide additional safety for the instrument. See [Transporting the instrument, page 17](#).

Instrument case

The instrument case is made of lightweight HPX resin. This is strong and durable and ensures a watertight, airtight, dust-proof, chemical resistant and corrosion proof environment for the scanner.

The case has a Vortex® valve on the front that can be used to equalize the atmospheric pressure after quick changes. It also has heavy duty wheels with stainless steel bearings, telescoping handle, and press and pull latches.

The TX8 3D scanner is fitted into a high-density foam mould that protects it against impact, vibration, and shock.

Left/front side view



Item	Description
①	Press and pull latch
②	Double-layered, soft grip handle
③	In-line wheel
④	Press and pull latch (x 2)
⑤	Auto-pressure release valve
⑥	Double-layered, soft grip handle

Bottom view




Item	Description
①	Retractable handle
②	Lock for retractable handle

Inspecting the instrument case

If the instrument case is not in good condition, examine the items inside for visible damage. If any items are damaged, immediately notify the carrier and your Trimble sales representative.

Keep the shipping box, the instrument case, and all packing material for the carrier to inspect.

Items in the instrument case

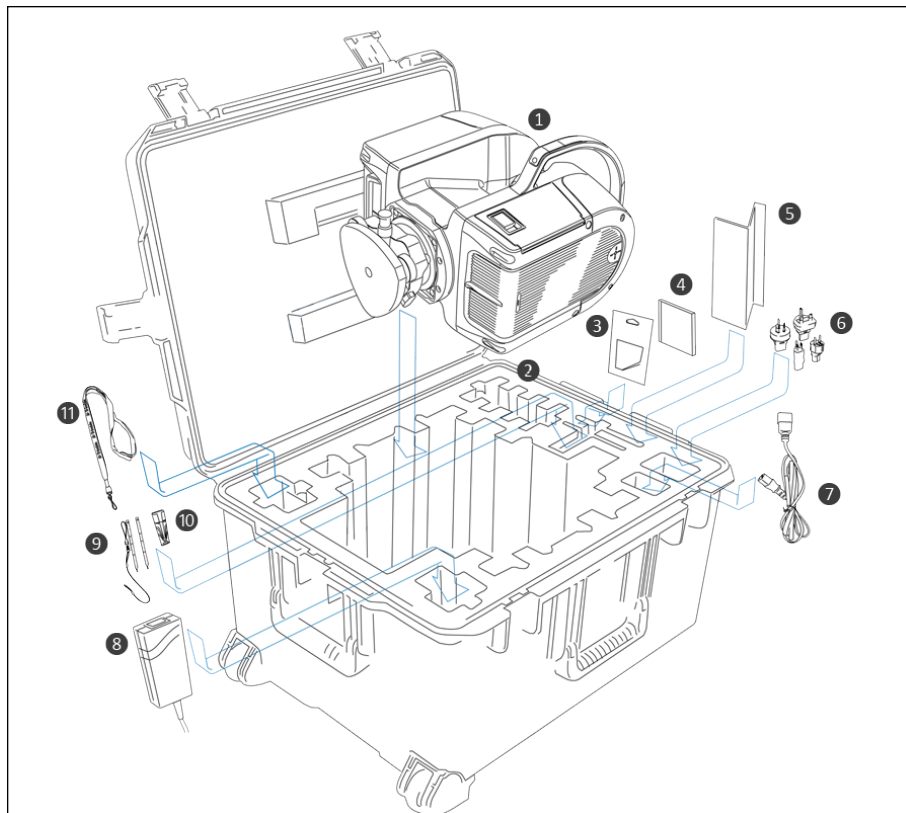

Item	Description
①	Trimble TX8 3D scanner and tribrach
②	Storage location for batteries (x4)
③	Set of screen protectors
④	Information disk (CD or DVD)
⑤	Getting Started Guide
⑥	Interchangeable adapter (x4)
⑦	Power supply cable
⑧	DC power supply
⑨	Stylus pen kit
⑩	USB flash drive
⑪	Trimble stylus pen lanyard
Not shown	Mirror cleaning cloth Pack of ten adhesive target T3 (5x)

Pulling the instrument case



CAUTION – Make sure that the instrument case is securely closed before carrying out this procedure.

You can pull the instrument case using the retractable pull handle.

1. Place the instrument case stood up on its left/front side.
2. Push and hold the lock to the right to release the telescoping handle.
3. Extract the telescoping handle to its full length.
4. Hold the telescoping handle firmly and tilt the box slightly so that it leans on its wheels.

Removing the instrument from the case



CAUTION – Take care when removing the instrument from the case. Use proper lifting form for heavy objects.

1. Place the instrument case on the bottom side.
2. Press and pull the four latches:



3. Open the cover of the instrument case.

1 Introduction

4. With one hand, grasp the instrument handle, and then place the other hand on the base of the instrument as shown:



5. Lift the instrument assembly out of the case:



Lifting the instrument

To lift the instrument, there are two grips in addition to the handle:

- The upper grip is located near the top on the side opposite the main handle.
- The lower grip is located on the bottom of the scanner on the side opposite the main handle.

Use the method that you find most comfortable to lift the scanner. The options are:

- With one hand, grasp the handle, and then grasp the upper grip with the other hand:



- With one hand, grasp the handle and then grasp the bottom grip with the other hand:



Transporting the instrument

When transporting the instrument, Trimble recommends the following:

- Use the instrument case (or preferably, the instrument case inside the original shipping box with the original foam padding blocks) to transport the instrument. The box(es) are designed to protect the instrument against shock and vibration.

Ensure that the instrument case is completely closed before moving or carrying it.

- Fix a warning label, **HANDLE WITH CARE**, to the instrument case or shipping box.

Packing the instrument case into the shipping box

1. If required, assemble the shipping box—open the box, fold in the pair of flaps along the width of the shipping box, fold in the pair of flaps along the length of the shipping box and then fasten the seam with tape or staples.
2. Place a foam pad inside the shipping box.
3. Insert the instrument case (with all the items in place) into the shipping box.
4. Place the second foam pad on top of the instrument case.
5. Close the shipping box by folding in the flaps and then fastening the seam with tape or staples.

Care and maintenance



WARNING – DO NOT remove any covers from the instrument. This instrument is designed to withstand normal electromagnetic disturbance from the environment but it contains circuits that are sensitive to static electricity. If an unauthorized person opens the instrument cover, the function of the instrument is not guaranteed and the warranty will be invalidated. The instrument is designed and tested to withstand field conditions, but like all precision instruments, it requires care and maintenance. To get the best results from the instrument, take the following steps:

- Do not subject the equipment to rough jolts or careless treatment.
- Keep the rotating mirror lens clean. Use only lens paper or other material that is designed for cleaning optical equipment.
- Keep the instrument protected and in an upright position, preferably in the instrument case.
- Do not carry the instrument while the instrument is mounted on a tripod. Doing so can damage the tribrach screws.
- Whenever manually rotating the instrument, use a slow and steady movement.
- Do not carry the instrument by the rotating mirror. Use the handle.
- When you need extremely precise measurements, make sure that the instrument has adapted to the surrounding temperature. Significant variations in instrument temperature can affect precision.

Cleaning



CAUTION – DO NOT use strong detergents such as benzene or thinners on the instrument or the instrument case.

Be very careful when cleaning the instrument, especially when removing sand or dust from the mirror lens. **DO NOT** use coarse or dirty cloth or hard paper. Trimble recommends that you use anti-static lens paper, a cotton wad, or a lens brush. To clean the exterior of the instrument, use a cloth lightly dampened with water.

Removing moisture

If the instrument has been in damp weather, take the instrument indoors and remove the instrument from the instrument case. Leave the instrument to dry naturally. If condensation forms on the mirror lens, allow the moisture to evaporate naturally.

Technical support

If you have a problem and cannot find the information you need in the product documentation, contact your local dealer. Alternatively, go to the Support area of the Trimble website (www.trimble.com/support/). Select the product you need information on. Product updates, documentation, and any support issues are available for download.

Related information

Sources of related information include the following:

- Release notes – The release notes describe new features of the product, information not included in the manuals, and any changes to the manuals. They can be downloaded from the Trimble website at www.trimble.com/support/.
- Trimble training courses – Consider a training course to help you use your instrument to its fullest potential. For more information, go to the Trimble website at www.trimble.com/support/index_training.aspx.

Instrument and Accessories


In this chapter:


- [Instrument views](#)
- [Accessories](#)

This chapter describes the instrument and its controls. Trimble recommends that you take the time to familiarize yourself with the names and locations of the controls.


Instrument views

Front of instrument

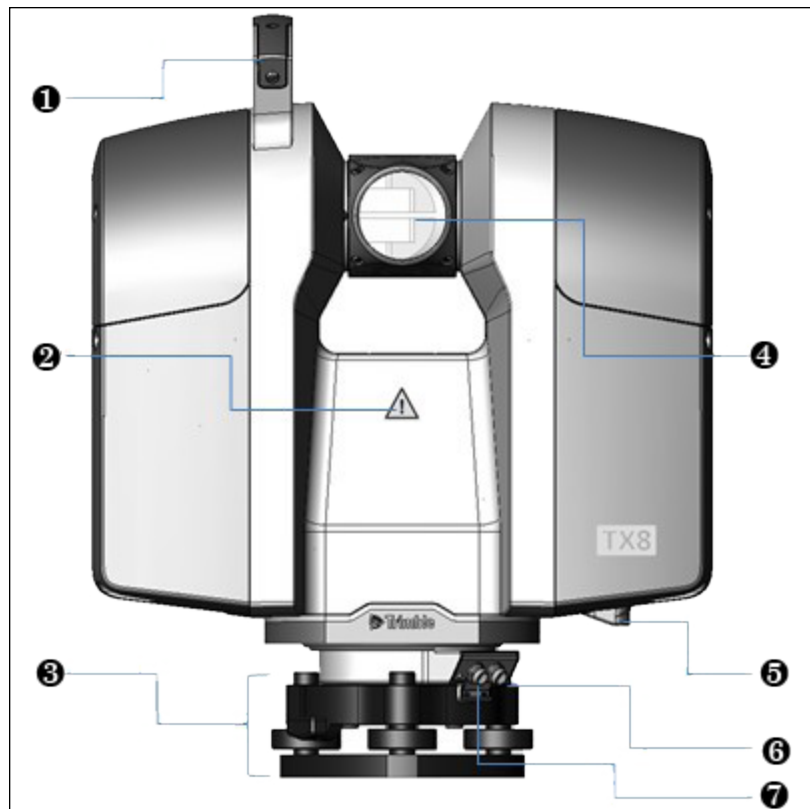


Item	Description
①	Handle
②	Hazard symbol label
③	Tribach
④	Spinning mirror
	 WARNING – Stay clear of spinning mirror when in use.
⑤	Bottom grip
⑥	Communication connector (for instrument servicing only)
⑦	Power connector

Back of instrument

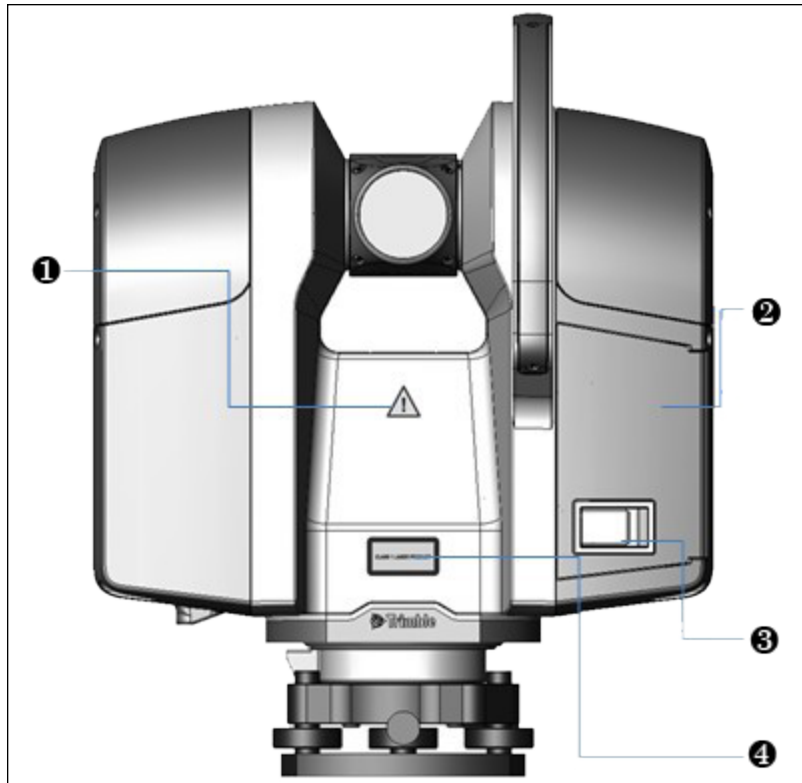


Item	Description
①	Hazard symbol label
②	Battery compartment door
③	Door latch
④	Laser warning label

Left side of instrument

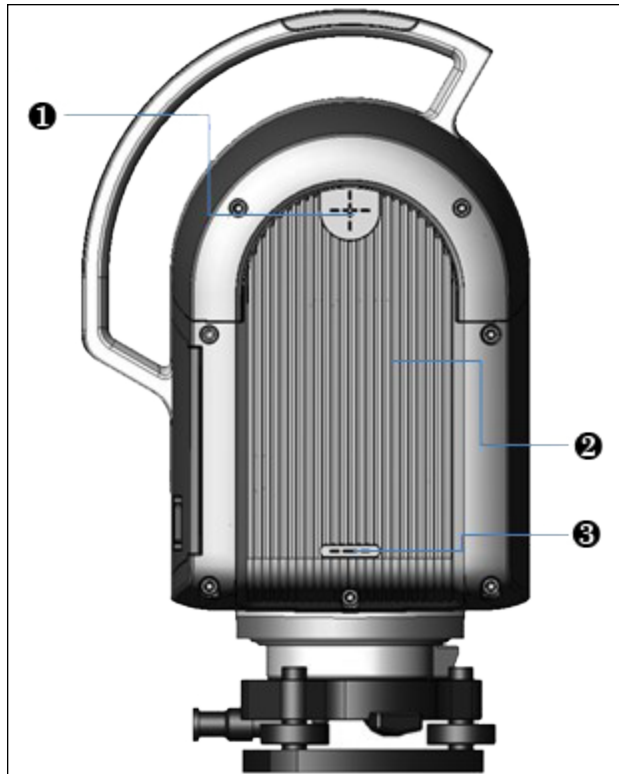


Item	Description
①	Top measurement mark
②	Instrument housing with integrated heat exchanger
③	Bottom measurement mark

Right side of instrument

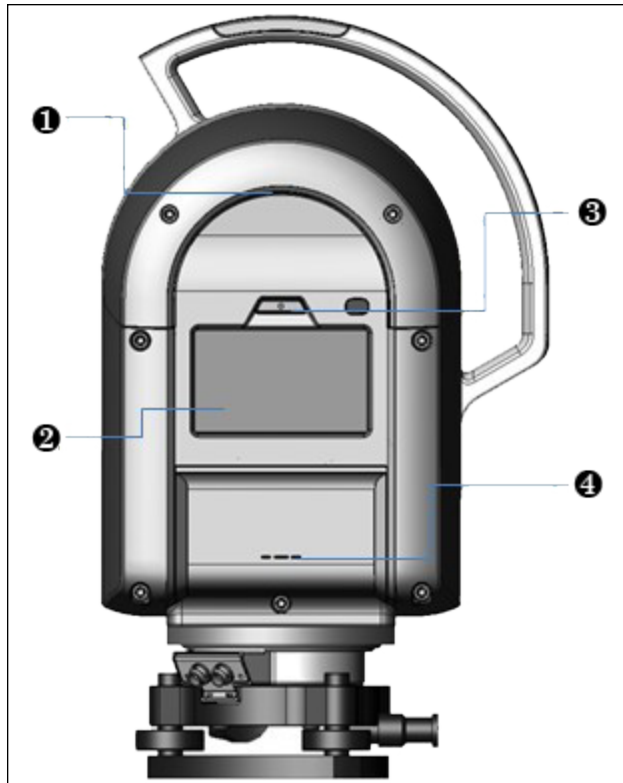

Item	Description
①	Top grip
②	Touch screen
③	On/Off key
④	Instrument height measurement mark

Battery/USB flash drive compartment

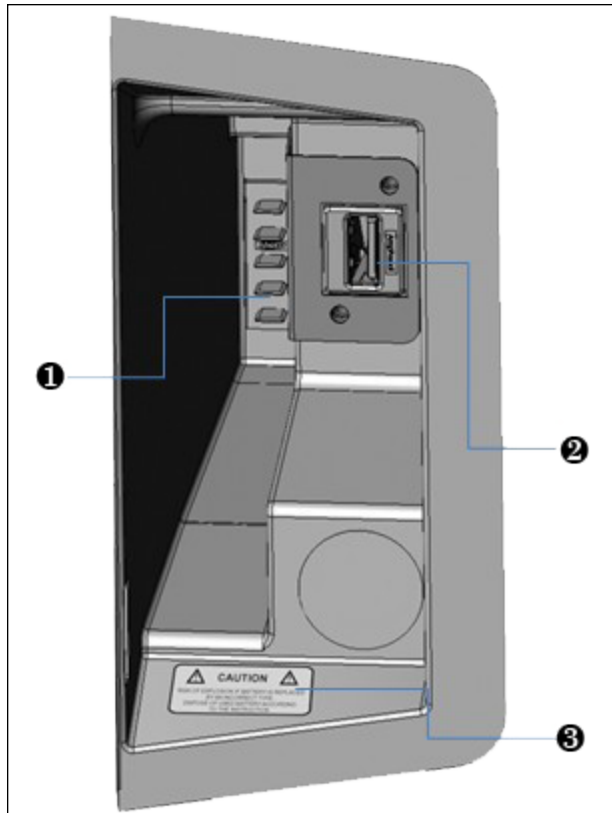

Item	Description
1	Battery connectors
2	USB port
3	Warning label

Accessories

Trimble recommends that you take some time to familiarize yourself with the names and the locations of the accessories.

Note – Trimble reserves the right to replace the illustrated units with an alternative item, without prior warning.


External power supply kit



CAUTION – The power supply unit provided is for indoor use only. When using the instrument outdoors, please use batteries for your power requirements.

The international power supply kit includes an external power supply, a power cable, and four connectors (Europe, USA, UK, and Australia).

External power supply

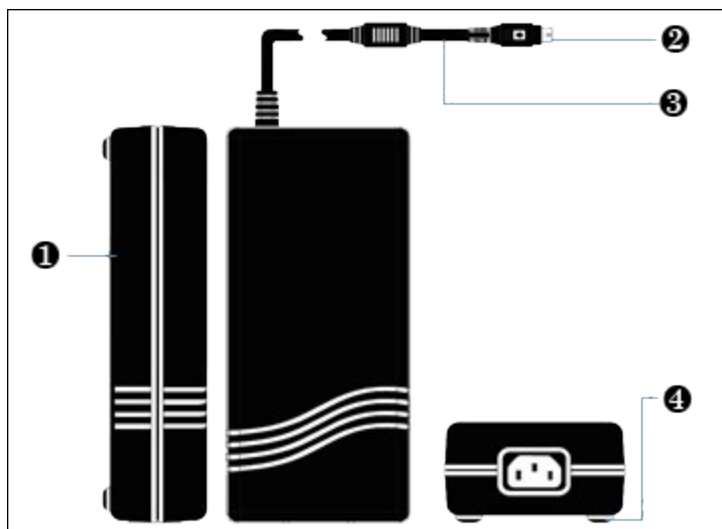

Item	Description
①	External power supply
②	4-pin connector
③	Power cable
④	Rubber foot

See also [External power supply specifications, page 77](#).

Power cable and connectors



Item	Description
①	Power cable
②	EU connector
③	Australia connector
④	UK connector
⑤	USA connector

USB flash drive

Use the USB flash drive that comes with the instrument or one that is commercially available. If you use a different USB flash drive, make sure that it is 64 GB or higher and formatted with FAT 32/16. See also [USB flash drive specifications, page 78](#).

Data acquired by your instrument is stored on the USB flash drive as well as the report resulting from a diagnostic of the instrument. The USB flash drive is also used to update the firmware in the instrument. See also [USB flash drive, page 65](#).

Battery kit

For information on the battery kit, refer to the *Trimble TX8 Battery Kit Quick Reference Card* that accompanies the instrument. See also [Battery kit specifications, page 78](#).

Smart battery

Before charging or using a smart battery it is important to read and understand the battery safety and environment information included in the Safety chapter on [page 4](#). See also [Smart battery specifications, page 78](#).




Item	Description
①	Flap
②	Connectors
③	Power gauge
④	Button

Charging the smart battery

The smart battery is supplied partially charged. Please charge the battery completely before using it for the first time. Charging takes approximately 4 hours per battery.

1. Place the charger on a hard, flat and level surface to ensure that there is airflow under the charger.
2. Plug the DC connector from the power supply unit into the back of the charger.
3. Plug the power supply cable to the external power supply.
4. Connect the other end of the power supply cable to a power supply network using an interchangeable connector.

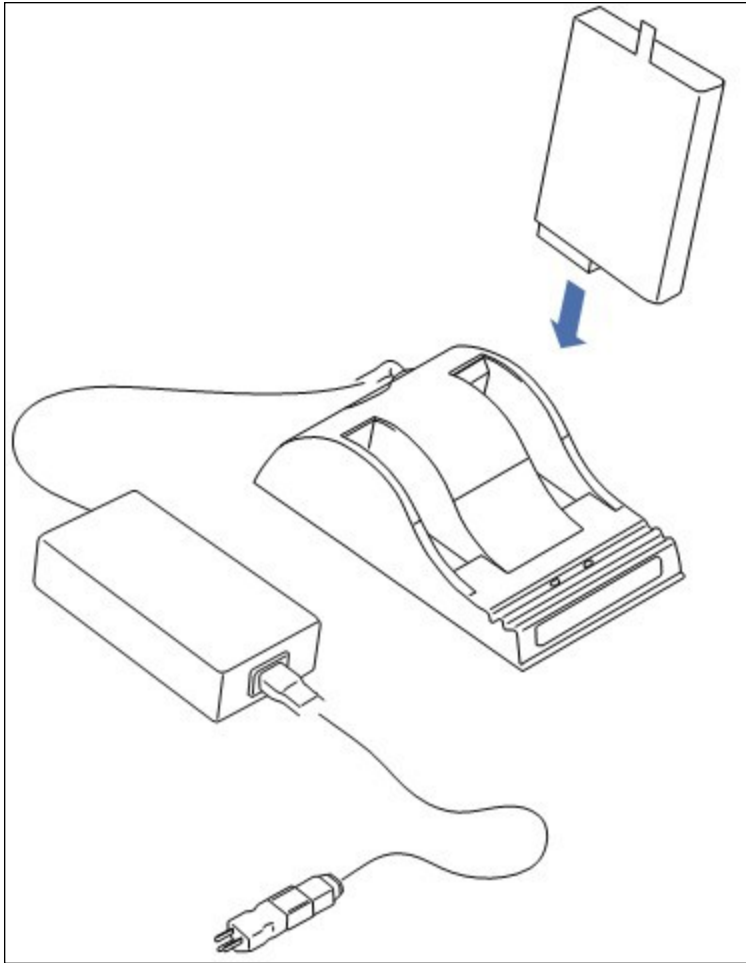






Checking the power level on a smart battery

Note – A battery with a poor power supply level may not be able to start the instrument (if it is switched Off) and may switch Off the instrument (if it is switched On).


To check the power supply in a smart battery, do one of the following:

- Use the integrated battery gauge. Press the button on the battery to view the four LEDs on the smart battery:
 - Each LED corresponds to a power level of 25%. If the battery is fully charged, all LEDs are lit. If it is completely discharged, all are unlit.
 - If all LEDs are flashing, the battery must be reconditioned in its charger.
- Check the level viewing the power supply icon on the touch screen with the instrument turned on. This icon indicates the following charge states:

Icon	Charge Level
	Less than 10%
	25%
	50%
	75%
	Fully charged - 100%

Two-bay charger

The two-bay charger enables you to charge or recalibrate the fuel gauge on two batteries at the same time. See also [Two-bay charger specifications, page 80](#).

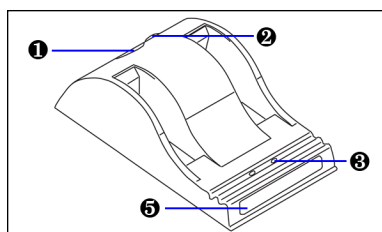


Item	Description
①	Fan outlet
②	DC connector
③	Battery bay
④	Calibration button
⑤	Status window
Not shown External power supply	

Connecting to the main power supply

1. Place the charger on a flat surface near an electrical outlet to ensure an airflow under the charger.
2. Plug the AC/DC converter cable into the DC input connector on the rear of the charger.

3. Plug the power cable into the AC/DC adapter and into an electrical outlet via an interchangeable connector. All the LEDs will flash momentarily to let you know that power is present:

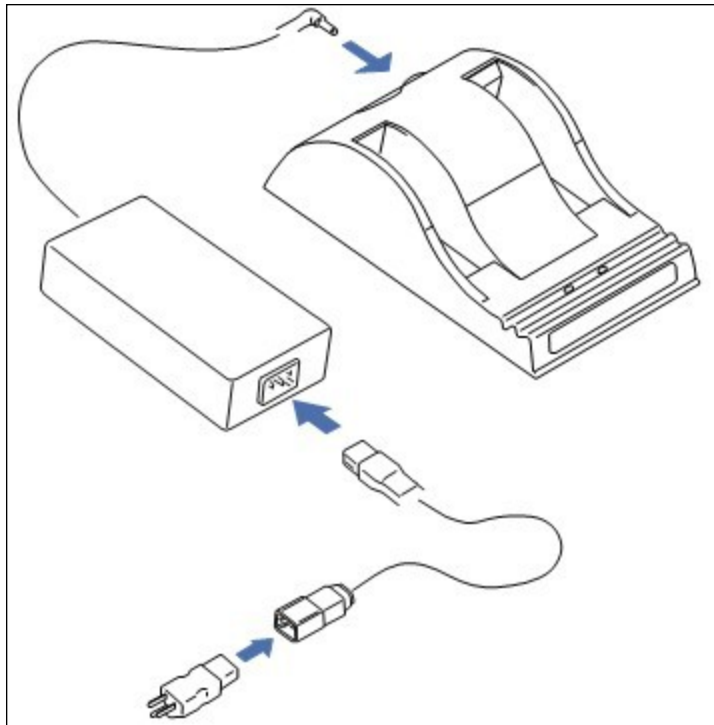

LED behaviors


There are two LED indicators behind the status window, one for each battery bay. Both indicate battery status.

If the icon is ...	then ...
* green, flashing	the battery is charging.
● green, solid	the battery is fully charged.
* blue, flashing	the battery is in calibration mode.
● blue, solid	the battery fuel gauge has been calibrated.
* red, flashing	the battery fuel gauge is in need of recalibration.
● red, solid	there is an error.

Tribrach

The tribrach that comes with the instrument is equipped with a bull's-eye bubble for leveling and a built-in optical plummet for precise setting up over a survey point. See also [Tribrach specifications, page 80](#).

The instrument is also equipped with an internal electronic level and dual-axis compensator. See [Leveling, page 54](#).

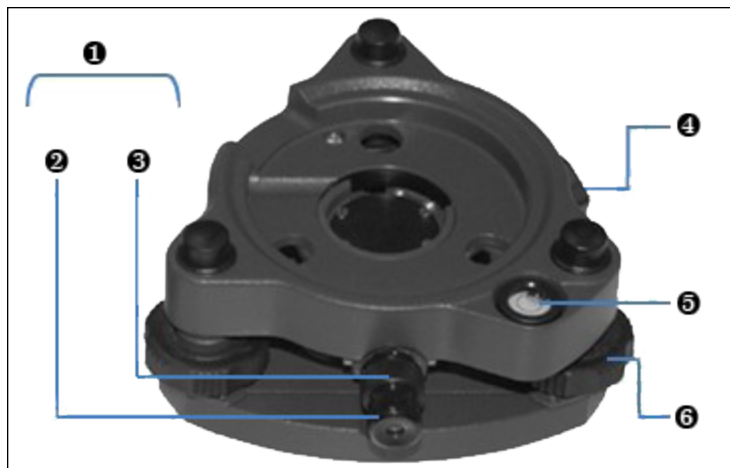

Item	Description
①	Eye piece
②	Focusing ring
③	Cross-hair ring
④	Clamping arm
⑤	Circular bubble level
⑥	Foot screw (x3)

Micro fiber lens cleaning cloth

A micro-fiber lens cleaning cloth is included. See [Micro fiber lens cleaning cloth specifications, page 80](#).

Stylus pen kit

The stylus pen kit is composed of two styluses and one tether.



Setup

In this chapter:

- [Setting up the instrument](#)
- [USB flash drive](#)
- [Changing default settings](#)
- [Powering the instrument](#)
- [Turning the instrument on and off](#)

Organize all the items from the instrument case and take them to where you want to collect data.

Once you have done this, you can set up the different parts and turn them on for use.

Setting up the instrument

1. With the tripod in place, carefully remove the instrument and tribrach from the instrument case.
2. Place the assembly over the tribrach plate:




3. Secure the instrument with the tribrach clamping arm:



USB flash drive



Inserting the USB flash drive

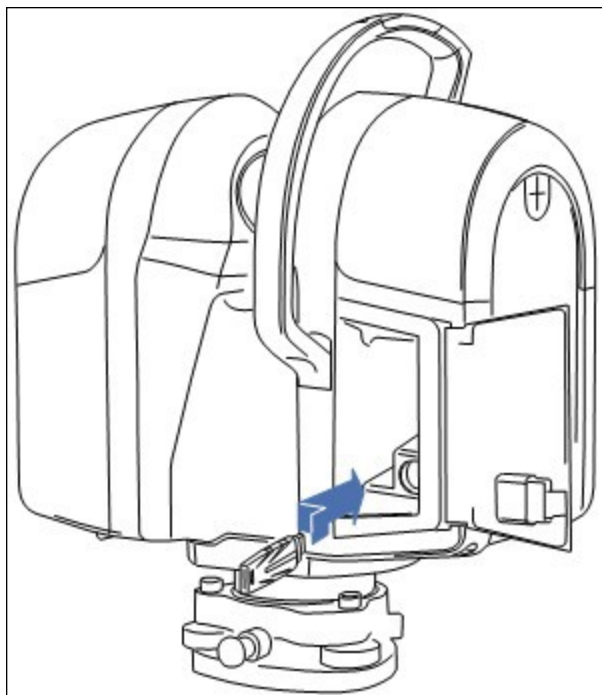1. Release the latch of the battery compartment door.
2. Open the battery compartment door.
3. Insert the USB flash drive into the USB slot:



4. Close the battery compartment door.

Once the USB flash drive has been inserted into the USB port, and once the instrument is switched on, the following icons appear on the touch screen:

If the icon	it indicates that the USB flash drive
 is black, with a number beside it	has been inserted into the instrument. The number corresponds to the number of scans the USB flash drive can store, which changes if you change the scan settings. See Scan Parameters, page 58 .
 is red and blinking	is missing, full, or needs to be formatted.

Removing the USB flash drive



CAUTION – DO NOT remove the USB flash drive from the instrument while it is scanning, running a firmware update, or processing a diagnostic test.

1. Release the latch of the battery compartment door.
2. Open the battery compartment door.
3. Remove the USB flash drive from the USB slot.
4. Close the battery compartment door.

Changing default settings

The instrument has factory default settings for date, time, and unit of measurements. Before using the instrument, you should change these to meet your requirements. See [Date/Time \(page 1\)](#) and [Units \(page 65\)](#).

Powering the instrument

You can use a battery or an external power supply to power the instrument. Both options are provided.

If you insert a battery into the instrument while it is connected to an external power unit, the battery will be used as the primary power supply (if the battery is fully charged). When the battery charge level drops to 60%, the external power supply takes over.

Using an external power supply



CAUTION – Remove the instrument from the tripod prior to transport. Do not move the instrument while connecting or disconnecting the external power supply.

1. Align the red dot at the connector of the power supply cable with the red mark at the 12 V power supply connector.
2. Firmly insert the cable connector into the 12 V power supply connector.
3. Plug the power supply cable to the external power supply.
4. Connect the other end of the power supply cable to a power supply network using an interchangeable connector:



Note – Use the interchangeable adapter suited to your power supply network.


Note – Use a circuit-breaker (not supplied) between the external power supply and the power supply network to protect your equipment against voltage fluctuations.

Note – Once the instrument is turned on, on the touch screen either the Battery icon appears if there is fully charged battery installed, or the Power Supply icon appears indicating that the external power supply is being used.

Inserting a battery

The smart battery fits into the battery compartment on the back of the instrument. It can be easily removed and replaced.

1. Ensure that the instrument is turned off.
2. Release the latch of the battery compartment door.
3. Open the battery compartment door.
4. Insert the battery into the battery compartment with the battery connectors positioned towards the bottom of the instrument:

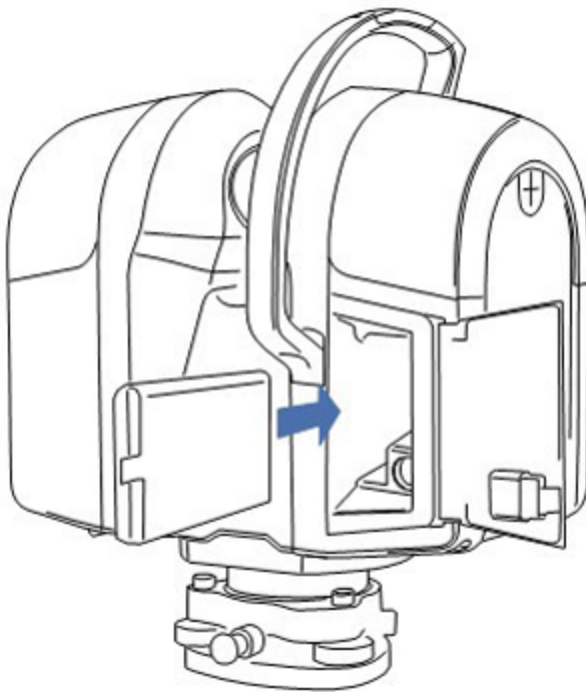

5. Close the battery compartment door.

Note – Once the instrument is switched on, the power supply icon on the touch screen indicates that the instrument is powered by battery.

Removing a battery



CAUTION – DO NOT remove the battery from the instrument while it is scanning, running a firmware update, or processing a diagnostic test.

1. Ensure that the instrument is turned off.
2. Release the latch of the battery compartment door.
3. Open the battery flap.
4. Remove the battery from its slot. If required, you can use the tab to help you do this:



5. Close the battery compartment door.


Turning the instrument on and off

Turning on the instrument

To turn on the instrument, press and hold the On/Off key for at least three seconds.

The LED on the On/Off key first lights up accompanied by a beep indicating that the instrument is starting up.

After the instrument has started, the LED stops blinking and stays illuminated in green. The main menu appears on the touch screen (see [Software \(page 40\)](#)):

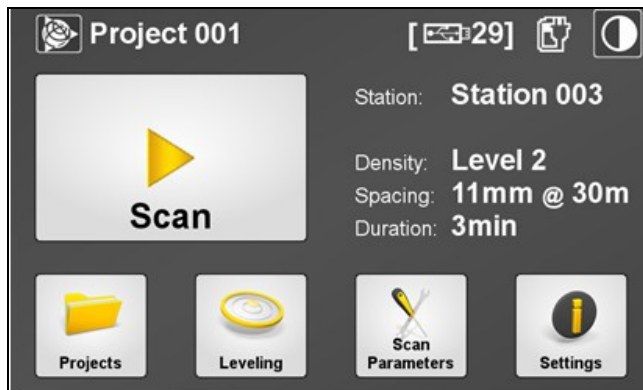

Note – To ensure the best performance it is important to first let the instrument warm up. To do this simply perform a Level 2 scan in the environment where the scanning will take place. See [Density, page 59](#).

Turning off the instrument

To turn off the instrument, press and hold down the On/Off key.

Software


In this chapter:

- [Touch screen](#)
- [Projects](#)
- [Leveling](#)
- [Scan Parameters](#)
- [Settings](#)

This chapter explains how to change the settings in the software to suit your needs.

Touch screen

The touch screen is a resistive screen. You can use either your finger, or the stylus that comes with the instrument to access the software settings and to perform scans.

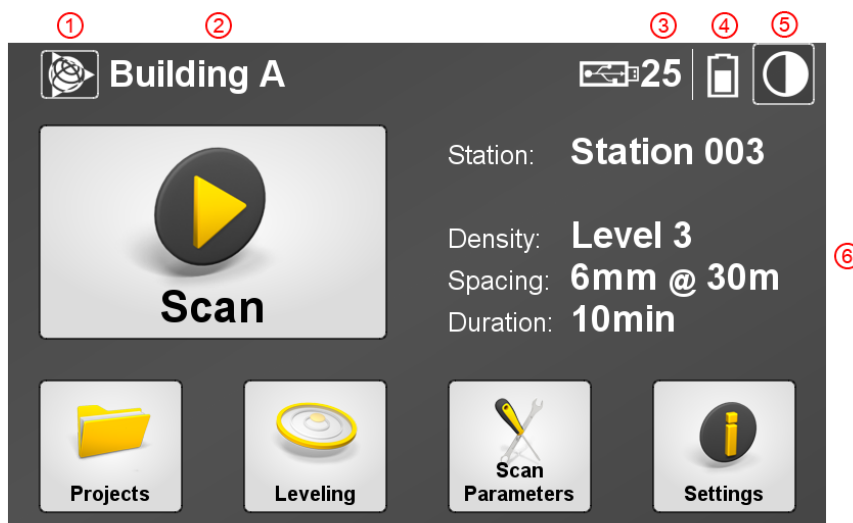

- | | | | |
|---|---|---|-------------------------------------|
| 1 | Trimble icon | 4 | Approximate remaining battery power |
| 2 | Current project | 5 | High contrast icon |
| 3 | Number of scans that can be stored in the USB flash drive using the current scan settings | 6 | Current scanning settings |

When powering the instrument with the USB flash drive missing, a dialog appears and prompts you to insert a USB flash drive. The USB Flash Drive icon flashes red. The message No USB Flash Drive appears next to the Trimble icon and there is no station name in the "Station" line.

Once an USB flash drive has been inserted into the USB port of the instrument, the dialog closes. The message NO USB Flash Drive disappears. The red and flashing USB Flash Drive icon stops flashing. It becomes white and displays the number of scans (based on the current settings) that it can store.

Note – The dialog only appears when the instrument starts. When unplugging the USB flash drive from the instrument while it is already powered on, only the USB flash drive icon flashes red and the message NO USB Flash Drive appears next to the Trimble icon.

Note – If the USB flash drive is missing, some features of the software are disabled. Selecting these features causes the screen to re-appear.

Projects


When you insert a new or an empty USB flash drive into the instrument, a new project is automatically created. By default, it is named "Project XXX" where XXX starts at 001 and increments by one digit each time a new project is created.

If there is no project available on the USB flash drive when turning on the instrument, a new empty project is created using the name of the last scanned project and starting with "Station 001". If there is a project stored on the USB flash drive, the last modified project is automatically loaded.


A project folder named "Project XXX" is created under the root of the USB flash drive. Under that folder, a RealWorks project file with an RWP file extension is also created.

To manage a project:

1. From the main menu, tap . The projects dialog appears:

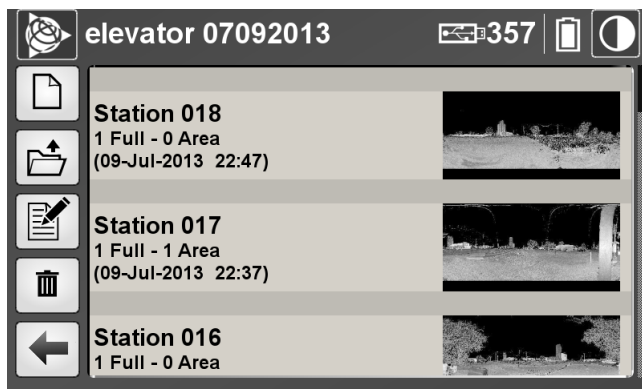

2. In this dialog, you can:
 - manage projects. See [page 43](#).
 - manage stations. See [page 46](#).
 - manage scans. See [page 48](#).


Note – If there is no USB flash drive in the instrument when tapping the **Projects** button , a dialog appears and prompts you to insert one.

Projects

Projects can be created, opened, edited, and deleted.

Creating a project

1. From the *Projects* menu, tap . The *Create new project* dialog appears:

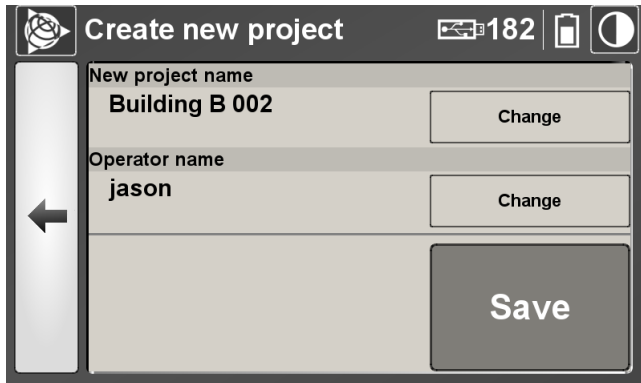

2. In the *New Project Name* panel, tap **Change**. The *Project name* dialog appears. Enter a name for the project and then tap **OK**.

The name for the next project is the current (or last) project with an increment. This increment can be either a number or a letter. For example, if the last character for the current project is 8, it will be then 9. If it is a S, it will be then a T, and so on. The name can be composed of letters, numbers, and characters. Some characters are forbidden, which are dimmed on the keyboard.

3. In the *Operator Name* panel, tap **Change**. The *Operator name* dialog appears. Enter the name of the operator and then tap **OK**.


If an operator name has been entered for the current project, this name is then used for the next project and it is displayed in the panel. If there is no operator name, the *Operator Name* panel is blank. The name can be composed of letters, numbers, and characters. The *Operator Name* is reset to blank when you reset your Personal Settings.


4. Tap **Save**. The *Create New Project* dialog disappears.

A project folder named Project XXX is created under the root of the USB flash drive. Under that folder, a RealWorks project file with an RWP file extension is also created.


Opening a project

1. From the *Projects* menu, tap . All projects are listed in order of creation:

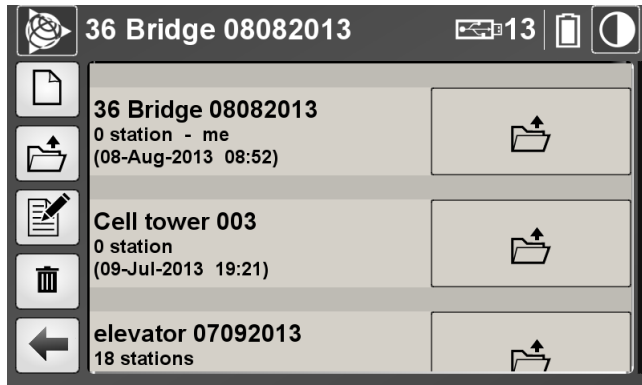




2. For each project, you can view the following information:
 - Project name.
 - Number of stations – Operator name.
 - Day/Month/Year and time of creation between parenthesis.
3. Tap  next to the project that you want to open. All stations in the project are listed. See [Stations, page 46](#).



CAUTION – Once you open and save a project in the Trimble RealWorks software, you will no longer be able to open it on the TX8 scanner. It disappears from the projects list after you tap the Open Projects icon .

Deleting a project

1. From the *Projects* menu, tap . The icon turns yellow  and a Delete icon appears next to each project except for the current open project. You cannot delete an open project.
2. Tap  next to the project that you want to delete. A dialog prompts you to confirm the operation.
3. Tap **Yes**.




CAUTION – Deleting a project deletes the related project file (with an RWP extension) and folder (with an RWI extension) as well as all scans in the project.

Editing projects

To rename a project:

1. From the *Projects* menu, tap . The *Edit current project* dialog appears:

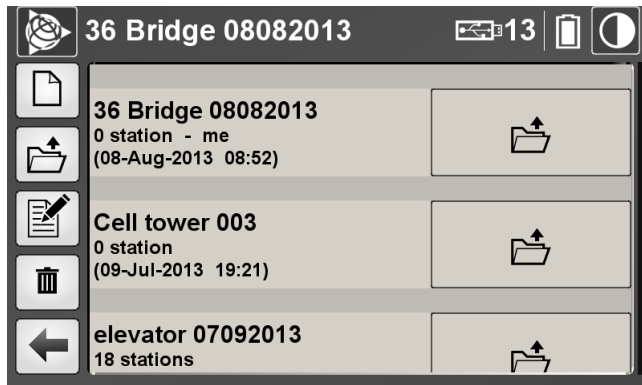

2. In this dialog, you can:
 - Rename the current project.
 - Change the operator name.
3. Tap **Save**. The *Edit Current Project* dialog closes.

To rename the current project:

1. In the *Current Project Name* panel, tap **Change**. An on-screen keyboard appears with the current name highlighted.
2. Enter another name and then tap **OK**. The *Edit current project* dialog appears.
3. Tap **Save**.

The Trimble RealWorks project file (with an RWP extension), the project folder (with an RWI extension), and the folder which contains both of the files are also renamed. If there is a TZF format file in the RWI folder, the project name (of the file) is also renamed.


To change the name of the operator in the current project:

1. In the *Operator name* panel, tap **Change**. An on-screen keyboard appears with the current name highlighted.
2. Enter another name and then tap **OK**. The *Edit current project* dialog appears.
3. Tap **Save**.

Note – The Operator name is reset to blank when you reset your Personal settings (see [page 71](#)).

Stations

After tapping the Projects icon, the current project opens automatically. If the project is empty, the message This project is empty appears. If it is not, all stations for that current project are listed:

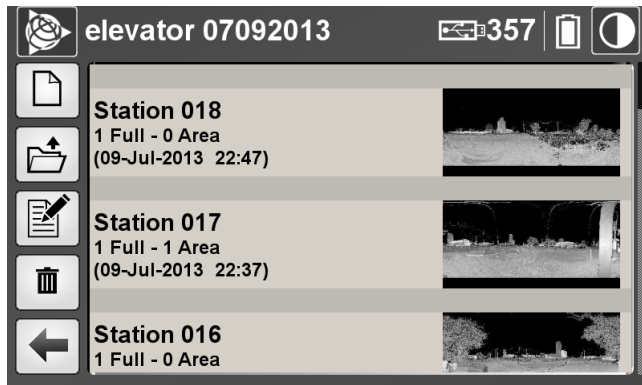

Stations are listed in order of creation. A station is simply a container. For each station, verify the following information:

- The number of Full scans.
- The number of Area scans.
- The Day/Month/Year and time it was created.
- A thumbnail image.

Creating a station


Each time a scan is performed, a new station is automatically created. By default, each station is named "Station XXX", where XXX starts at 001 and increments by one digit each time a new station is created. You cannot manually name a newly created station; you must use the default one.

The number between the parenthesis next to the USB flash drive icon on the main menu decreases each time a new station or scan is created. At the same time, a TZF format file is created and placed in the RealWorks project folder (named Project XXX.rwi). The TZF format file is: Project XXX_Station XXX_Scan XX.tzf. If the current project is empty (no stations), the RealWorks project folder is automatically created.

The current station name is shown in the title bar:



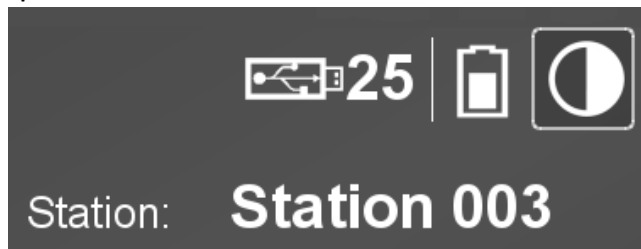

Tip – The name on the main menu is the name of a new station:



Deleting a station

Deleting a station deletes all the scans associated with that station.

1. Tap . A Delete icon appears next to each station, in place of the thumbnail.
2. Tap  next to the station that you want to delete. A dialog appears and prompts you to confirm the deletion. Tap **OK**.



CAUTION – You may see that the station is removed from the list on the touch screen. The "Project XXX_Station XXX_Scan XX.TZF" file(s) that is related to the deleted station is also removed from the RealWorks project folder (with an RWI extension) on the USB flash drive. Wait a while, otherwise, the file(s) will not be deleted from the USB flash drive.

Scans

When you tap the station's thumbnail, all scans for that station are listed. Scans are listed in order of creation. For each scan, you can view the following information:

- Type: "Full" or "Area".
- Density of acquisition: Level 1, Level 2, Level 3, or Extended (if the Extended option is installed). See [page 59](#).
- The Day/Month/Year and time of creation.
- The thumbnail preview of the image to be scanned.

Creating a scan

By default, a scan is a 360° acquisition of 3D coordinate data, also known as a "Full scan". If you want to acquire data on a smaller area, this is called an "Area scan".

Each scan is named "Scan XX" where XX is its order. XX starts at 01 and increments by one digit for each new scan. You cannot give a name to the newly created scan other than the default one. For each scan, a TZF format file is created and placed in the RealWorks' RWI folder. It is named: Project XXX_Station XXX_Scan XX.


Note – *The current scan name does not appear on the title bar as for a project or a station.*



CAUTION – When moving to a new station you must return to the *Home* menu and start the scan from there. All scans performed from the *Scan Display* menu are associated with that station.

Full scans

To acquire a Full scan:

1. From the main menu (or in the *Scanning* panel of the *Leveling* dialog), tap . The instrument performs an initialization. It rotates around its vertical axis to find its zero position. Once done, data acquisition starts and a progress bar appears.


Select a condition specified in the following table. This condition combines the Compensator feature and the Auto Level Check function with the Leveling state of the instrument.

Instrument leveling	Disable compensator	Auto level check	Instrument leveling
Out of Range	Unchecked	Unchecked	Enabled
Unleveled			
Leveled			
Out of Range		Checked	Disabled
Unleveled			Enabled
Leveled			
Out of Range	Checked	Unchecked	Enabled
Unleveled			
Leveled			
Out of Range		Checked	
Unleveled			
Leveled			

Note – If the USB flash drive is full, a dialog appears only after tapping **Scan**.

- You can interrupt the acquisition in progress by tapping **Stop** or wait until it finishes.

On completion of the operation, the acquired data is written to the USB flash drive and a visual of the scan appears:

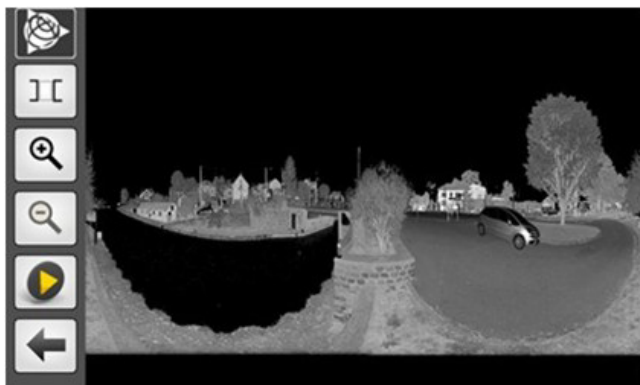

Note – If there is no USB flash drive in the instrument when tapping the Scan icon, a message appears and prompts you to insert one.

Tip – On the scan display screen, the Scan icon is always enabled. By tapping it, you can acquire another Full scan or perform an area scan. You can check that you are still in the Full Scan acquisition mode in the next step (after tapping on the Scan icon) as the next page name is Full Scan and the framing area is indicated as 0° to 360°.

Note – When resetting the Personal Settings, the Area scan density defaults to the last setting used.




CAUTION – A warning message appears at the end of the acquisition if the instrument position has changed before, between, or after the scanning.

Once a Full scan is complete, you have the option to perform another Full scan within the same station or perform a scan of a specific area (known as an *Area scan*).

Area scans


To acquire an Area scan:

1. From the scan display screen, tap the Area Scan icon . The Area Scan icon is highlighted in yellow and two vertical red lines show the boundary of the area to be scanned:




The default size of the scan area is one-third the size of the Full scan display. Areas that are shaded blue are not scanned.

2. Define a scan area:
 - a. Tap on a vertical line to drag it into position. When selected, the vertical line turns green. Drag the vertical lines to position the boundaries of the scan.

Tip – To return to Full scan mode for the current station, simply tap the Area scan icon  again to remove the vertical lines.

- Tap . The *Area scan* dialog appears:

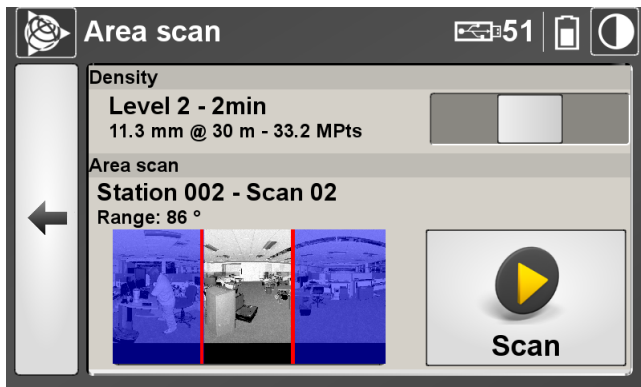




3. Set the density of the scan. See [page 59](#).

The *Density* parameter in this dialog may differ from the *Density* parameter in the *Scan Parameters* dialog. For this reason, the number of scans that the USB flash drive can store may change.



4. Tap .

Performing an additional Area scan

Do one of the following:



- Tap the Area Scan icon .
- Redefine the area to be scanned using the vertical bars.
- Tap the Scan button  to view the *Area scan* dialog.
- Tap the Scan button .

Canceling a scan

1. Tap **Stop**.
2. Either tap  or  to return to the main menu. A message appears asking whether or not you want to return the instrument to its origin.
3. Tap **Yes**. The instrument rotates to be positioned to its origin.

Note – A TZF file is created even if the scan has been interrupted.

Deleting a scan


1. Tap . A Delete icon appears next to each scan, in place of the thumbnail.
2. Tap  next to each scan you want to delete. A dialog appears and prompts you to confirm the deletions.
3. Tap **OK**.



CAUTION – Deleting a scan also deletes the related TZF file from the RWI folder on the USB flash drive.


Viewing a scan

1. If required, open a project.
2. In the list of stations, tap on a station thumbnail beside the station to load.
3. In the list of scans, tap a thumbnail image corresponding to the scan to be opened. The Lpic related to the loaded scan appears:

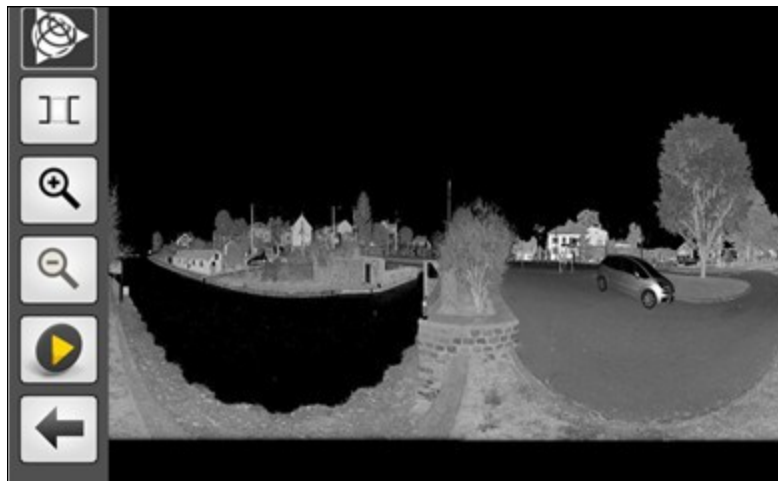


Note – If you leave the displayed Lpic by tapping , this returns you to the main menu. If you tap the Projects icon, this will not display the list of stations but the list of scans.

Zooming In

Tap .

Zooming out

After zooming in, the Zoom Out button becomes enabled. To zoom out, tap .

Panning

Drag and drop the scan data in a given a direction to pan it in that direction.

Leveling


Leveling an instrument is the action of adjusting its vertical position using the three leveling screws of the tribrach located below the instrument. The electronic bubble in the *Leveling* dialog provides a visual control to check whether or not the instrument is leveled. It may have three states: Out of Range (not visible), Yellow, or Green.

In addition to the electronic bubble, the *Leveling* dialog displays the Trunnion and Sighting information. The horizontal rotation's axis of the instrument is called Trunnion, while its sighting direction for acquiring cloud data is called Sighting. Both are expressed in degrees, minutes, and seconds. When activated, the Compensator will automatically level-compensate all 3D points.


To level the instrument:

1. From the main menu, tap . The *Leveling* dialog appears.

When the instrument is leveled, the electronic bubble color is green and centered:

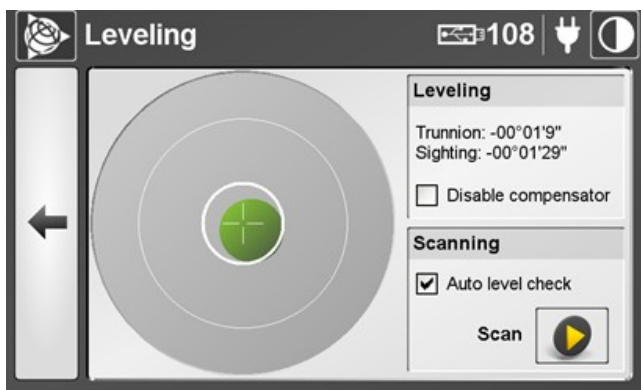

When the instrument is out of range, the electronic bubble is not visible on the screen. A green arrow indicates in which direction the bubble is:

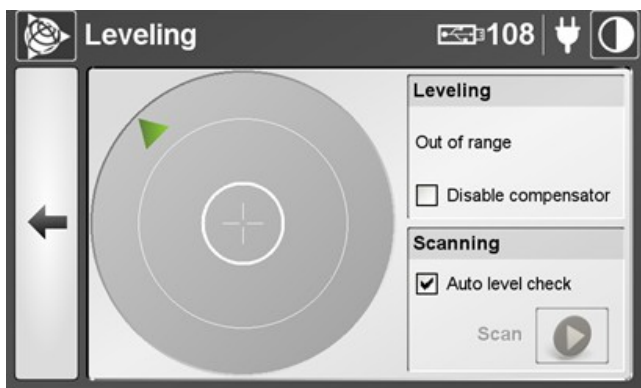


This window only appears when you start scanning with an instrument that is out of range and the *Auto level check* option is selected.

2. From this dialog, you can:

- Level the instrument, if it is Unleveled. See [page 56](#).
- Activate (or deactivate) the compensator. See [page 57](#).
- Activate (or deactivate) the Auto level check. See [page 57](#).

Unleveled


When the instrument is unleveled, the color of the electronic bubble is yellow and it appears off-centered:

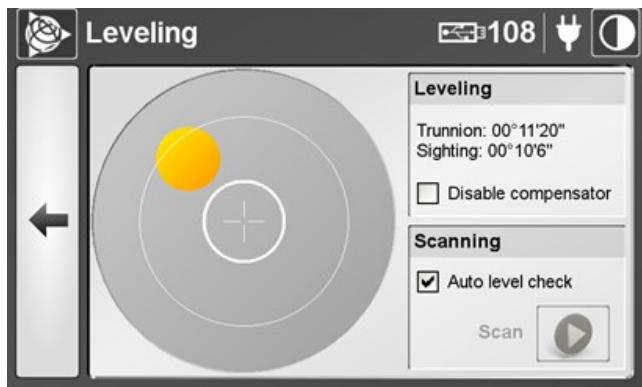

This window only appears when you start scanning with an instrument that is unleveled and the *Auto level check* option is selected.

To adjust the vertical position of the instrument:

- Turn the three foot screws of the tribrach below the instrument until the electronic bubble level first turns green and then becomes centered in the middle of the bull's-eye.

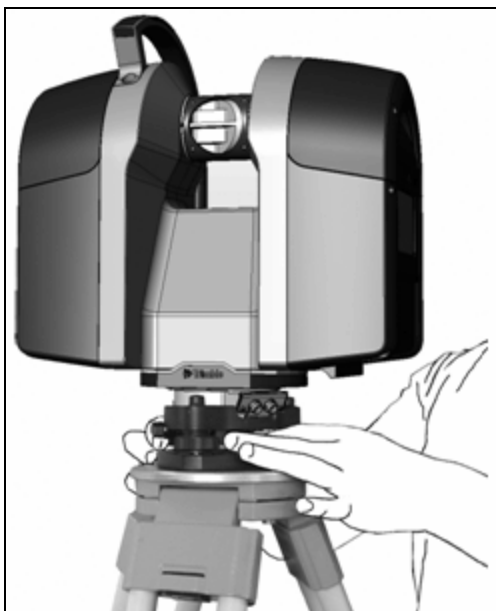



Compensator

The Compensator, which has a vertical compensation feature, automatically level-compensates all 3D points. You can decide whether or not to apply this feature.


To activate the compensator:

1. In the *Leveling* panel of the *Leveling* dialog (see [page 54](#)), ensure that the *Disable compensator* option is cleared.

2. Tap  to return to the *Leveling* dialog or tap  to return to the main menu.

To deactivate the compensator:

1. In the *Leveling* panel of the *Leveling* dialog, select the *Disable compensator* option.

2. Tap  to return to the *Leveling* dialog or tap  to return to the main menu.

Auto level check

The Tilt component in your instrument is a dual-axis detector (Trunnion and Sighting axes).

Activating the Auto Level Check

1. In the *Scanning* panel of the *Leveling* dialog (see [page 54](#)), select the *Auto level check* option.

2. Tap  or  to return to the main menu.


Deactivating the Auto Level Check

1. In the *Scanning* panel of the *Leveling* dialog (see [page 54](#)), ensure that the *Auto level check* option is not selected.

2. Tap  or  to return to the main menu.


Scan Parameters

To define a scan parameter:

1. From the main menu, tap .

If you do not have a USB flash drive attached to the instrument, a message appears and prompts you to insert one.

The *Scan Parameters* dialog appears:

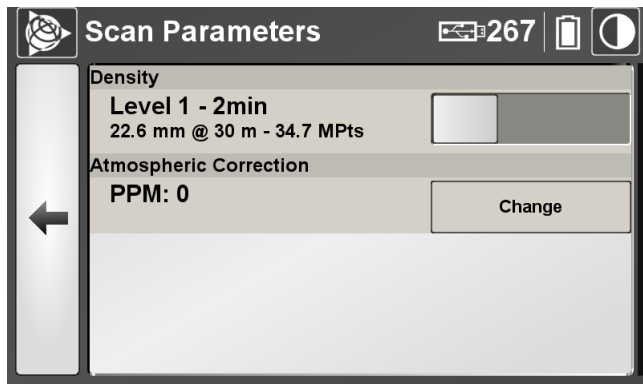

2. In this dialog, you can:
 - Set a scan density. See [page 59](#).
 - Apply an atmospheric correction. See [page 60](#).


Density

There are four predefined Densities called Level 1, Level 2, Level 3, and Extended. Extended is a level that only appears if you have upgraded the instrument. The following table shows the parameters of each density level as well as estimates about the number of points that will be acquired and the time necessary for the acquisition:


Level	Spacing ¹ (mm)	At a Distance of (m)	Number of points (in million of points)	Duration (min)
1	22.6	30 m	34.7	2
2	11.3	30 m	138.9	3
3	5.7	30 m	555.5	10
Extended	75.4	300 m	312.5	14

To choose a density:

 - In the *Density* panel, move the slider to a position:
 - Left side for Level 1:



 - One position to the right from the left side for Level 2 (if the Extended option is installed) or in the middle (if the Extended option is not installed).
- One position to the right from the right side for Level 3 (if the Extended option is installed) or at the right side (if the Extended option is not installed).
- Right side for Extended.



The number of scans that can be stored on the USB flash drive changes according to the chosen Density.

The Density for a Full scan can be defined from the *Scan Parameters* dialog (see [page 58](#)) while the Density chosen from the *Area Scan* dialog is applied to an Area scan. When you reset your personal settings (see [page 71](#)), the Density of both types of scans is reset to Level 1.

In the main menu, the Spacing value for Level 1 (or Level 3) is rounded up to the nearest value: 23 mm (or 6 mm) instead of 22.6 mm (or 5.7 mm). The Spacing value for Level 2 or Extended is rounded down to the nearest value: 11 mm instead of 11.3 mm.

¹The Spacing parameter is the distance between two consecutive laser spots.


Atmospheric correction

The instrument uses the EDM (Electronic Distance Measurement) technology to collect points. Distance measurement is function of the velocity of light in the atmosphere and the velocity of light depends on the refractive index of air, temperature, pressure, and humidity. The Atmospheric Correction feature applies corrections to the distance measurement—expressed in PPM (Parts Per Million)—according to these atmospheric conditions.



The default PPM value is zero. This value can be entered or it can be computed from both the Pressure value and the Temperature value.

To change a PPM value:

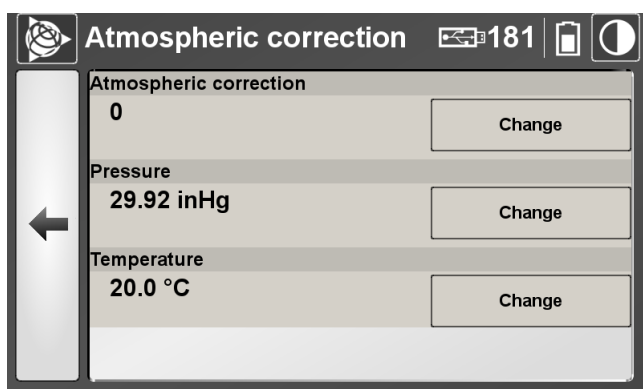1. In the *Atmospheric correction* panel of the *Scan parameters* dialog (see [page 58](#)), tap **Change**. The *Atmospheric correction* dialog appears:



2. In this dialog, you can:
 - Enter a PPM value. See [page 61](#).
 - Change the Pressure value. See [page 61](#).
 - Change the Temperature value. See [page 62](#).

3. Either tap  to return to the *Scan Parameters* dialog or tap  to return to the main menu.

Note – The new PPM value, once defined, remains unchanged and is applied to scans from when it has been defined until you change it again or even if the scanner has been turned off and on or after an update of the firmware.

Note – The PPM value will not be updated if only one of the two parameters (either the Pressure or the Temperature) is defined.

PPM

In the *Atmospheric Correction* panel, the "Keyed In" text below the PPM value means that you have manually entered the value. When the "Keyed In" text is not present, the PPM value is a computed value calculated from both the Pressure value and the Temperature value.

To enter a PPM Value:

1. In the *Atmospheric Correction* panel of the *Atmospheric correction* dialog (see [page 60](#)), tap **Change**. An on-screen keyboard appears with the current PPM value highlighted.

The keys that you can use are: 0, 1, 2, ... 9 and + and -. The value you can enter ranges from is -31 to +55.

If you enter a value lower than -73 or higher than +145, this value is automatically rounded to -73 or to +145.


2. Enter a value and then tap **OK**. The on-screen keyboard disappears.

As the Temperature value and the Pressure value cannot be exactly deduced from the PPM value, both are set as blank. Similarly, when you change the current PPM value, which is previously different from zero, to zero, this will set the Temperature and Pressure values to blank.

Pressure

To change the pressure value:

1. In the *Pressure* panel of the *Atmospheric correction* dialog (see [page 60](#)), tap **Change**. An on-screen keyboard appears with a blank field:

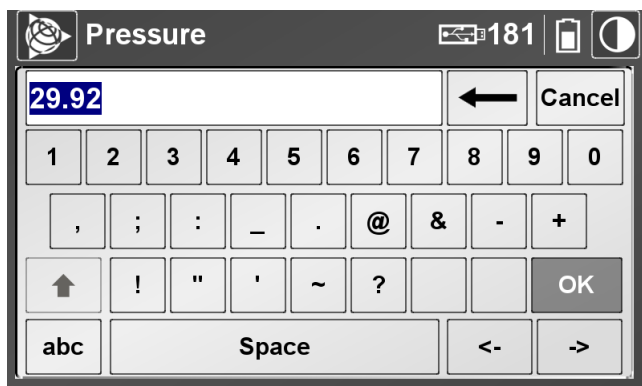

The keys you can use are 0, 1, 2 ... 9 and ".". The value you can enter ranges from 870 mbar to 1020 mbar.

If you enter a value lower than 870 mbar (or higher than 1020 mbar), this value is automatically rounded to 870 mbar (or to 1020 mbar).


2. Enter a value and then tap **OK**. The on-screen keyboard disappears. The new value appears in the *Pressure* panel using the unit of measurement defined in the *Settings* dialog (see [page 65](#)).

The newly input Pressure value will not update the current PPM value if there is no value in the *Temperature* panel (the current PPM value equal to Zero). You also need to define the Temperature value.

Temperature

To change the temperature value:

1. In the *Temperature* panel, tap **Change**. An on-screen keyboard appears with the current temperature highlighted or a blank field:

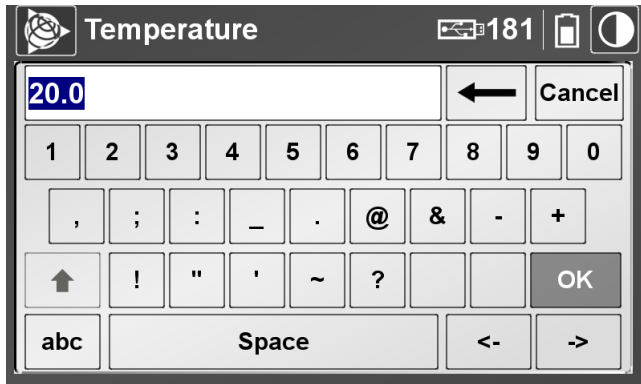

The keys you can use are 0, 1, 2 ... 9 and ".". The value you can enter ranges from 0 °C to +40 °C. If you enter a value lower than 0 °C or higher than 40 °C, the value is automatically rounded to 0 °C or to 40 °C.


2. Enter a value and then tap **OK**. The on-screen keyboard disappears. The new value is then displayed with the unit of measurement that is defined in the *Settings* screen (see [page 63](#)).

The newly input Temperature value will not update the current PPM value if there is no value in the *Pressure* panel (the current PPM value equal to Zero). You also need to define the Pressure value.

Settings

To change the general settings:

1. From the main menu, tap . The *Settings* dialog appears:

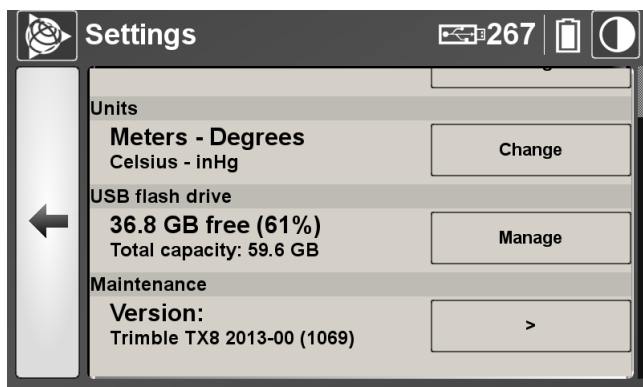

2. In this dialog, you can:
 - Set the date and time. See [page 64](#).
 - Select measurement units. See [page 65](#).
 - Manage the USB flash drive. See [page 65](#).
 - Maintain the system. See [page 67](#).
 - Set the scanning face. See [page 72](#).

Date/Time


If the default date and time settings do not match the current time zone, change them manually. The format is Year/Month/Day (date) and Hour/Minutes/Seconds (time).



The *Date - Time* panel shows the current date and time.

1. Next to the *Date - Time* panel, tap **Change**. The *Change Date & Time* dialog appears:

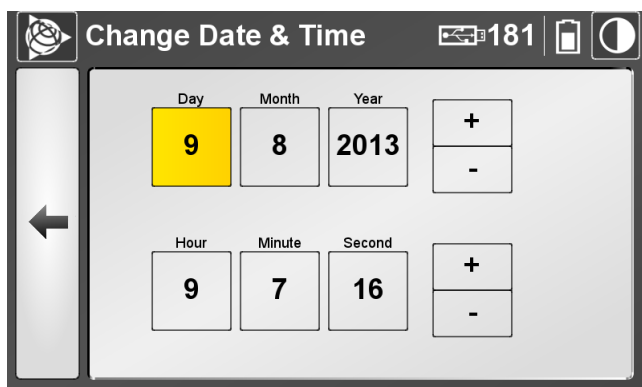

2. Tap in a field. It is highlighted in yellow:




3. Tap  to increase or  to decrease by one digit until the date and time change to your requirements.



4. Either tap  to return to the *Settings* dialog or tap  to return to the main menu.

Units

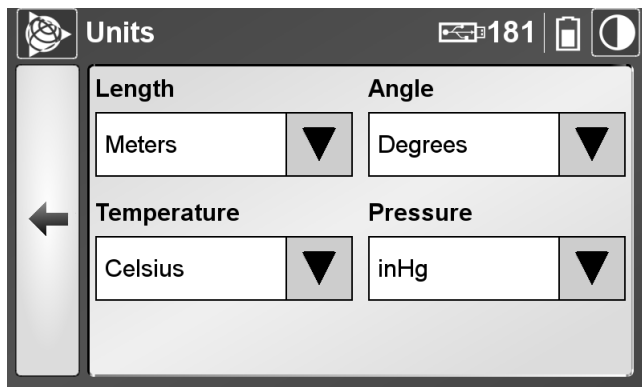The *Units* panel shows the current unit of measurement for the length, angle, temperature, and pressure:



1. Next to the each field, tap the down arrow and select the required units for length, angle, temperature, and pressure.


2. Tap  to return to the *Settings* dialog or tap  to return to the main menu.

USB flash drive

The *USB flash drive* panel shows the total capacity of the USB flash drive in GB, and the remaining storage capacity of the drive, in percentage. You can also test the speed of the attached USB drive, check it for errors, repair it, or format it.

To manage the USB flash drive:

1. In the *USB flash drive* panel, tap **Manage**. The *USB flash drive* dialog appears:

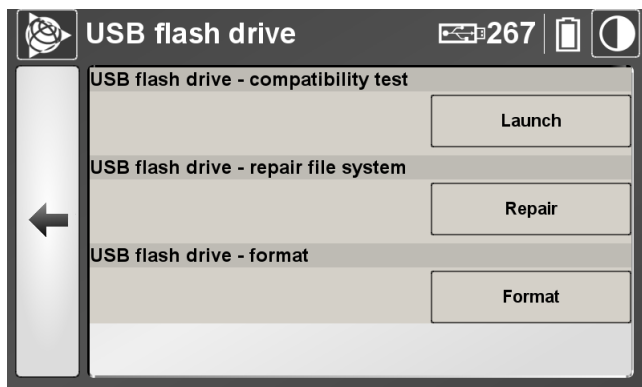

2. In this dialog, you can:
 - test for USB flash drive compatibility. See [page 66](#).

- check and repair the USB flash drive. See [page 66](#).
- format the USB flash drive. See [page 66](#).

Compatibility Test

You can test the write performance of your USB flash drive. Trimble recommends it is at least 16 MB.

To perform a compatibility test:

1. In the *USB flash drive - compatibility test* panel, tap **Launch**. The *USB flash drive - compatibility test* dialog appears.
2. Tap **OK**. The compatibility test is then performed with a progress bar showing the progress in percent.
3. Once complete, tap **OK**. The dialog closes and the *USB flash drive* dialog reappears.

If the USB flash drive is not compatible with the system, replace it with a faster one.

Repair file system

1. In the *USB flash drive - repair file system* panel, tap **Repair**. The *USB flash drive - repair file system* dialog appears.
2. Tap **OK**. The repair is then performed.
3. Once complete, tap **OK**. The main menu automatically appears.



While the USB flash drive is being repaired, the  icon on the main menu flashes red.

Format



CAUTION – Formatting a USB flash drive deletes all the data on the drive. A new empty project named Project 001 is created once the formatting is completed so that you can start scanning.

1. In the *USB Flash Drive - Format* panel, tap **Format**. The *USB Flash Drive - Format* dialog appears.
2. Tap **OK**. The reformatting is then performed.
3. Once done, tap **OK**. The main menu appears.




While the USB flash drive is being reformatted, the  icon on the main menu flashes red.

Maintenance

You can keep your instrument up to date by updating its firmware, running a diagnostics test to check each of its components, or resetting all your personal settings.

1. In the *Maintenance* panel, tap >. The *Maintenance* dialog appears:

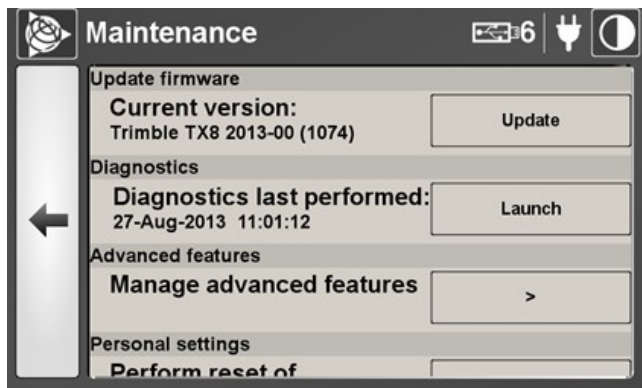

2. In this dialog, you can:
 - Update the firmware. See [page 68](#).
 - Run a diagnostics test. See [page 69](#)
 - Access the advanced features of the software. See [page 70](#)
 - Reset all personal settings. See [page 71](#)

Update Firmware

In the *Update Firmware* panel, you can view the version of the current firmware in use. A firmware file is in DAT format. Before performing a firmware update, copy the new firmware file (.dat) to the root of your USB flash drive and then plug the USB flash drive into the USB port of the instrument.

To perform a firmware update, you must connect an external power supply to the instrument instead of using the internal battery (see [page 36](#)).



1. Tap **Update**. The *Firmware Update* dialog appears.
 - If there is a firmware file in the USB flash drive, it appears in the *Select Firmware* list.
 - If there is no firmware file in the USB flash drive, the message No Firmware Found On The USB Flash Drive appears.
2. Tap **Select** next to the firmware file to be uploaded. The *Firmware Update* dialog appears and prompts you to update the firmware with the selected firmware file.
3. Tap **OK**. When the upload has completed, restart the instrument. See [page 39](#).
4. First switch the instrument off and then on. The *Firmware Update* dialog reappears.
5. Tap **OK**.
6. When the update is complete, tap **OK** again. The *Firmware Update* dialog closes.

Diagnostics

In the *Diagnostics* panel, you can view when the last diagnostics test was performed. You can also open the report of the last diagnostics test.

To start a diagnostics test:

1. Tap **Launch**. A dialog appears and prompts you to perform a diagnostics test.
2. Tap **OK**. If no scan has been performed initially, the instrument will perform an initialization. If a scan has been previously performed, the diagnostics test starts.
3. Once complete, the instrument oscillates a few degrees on either side of its zero. When prompted, tap **OK**. The Diagnostics report then appears.

4. To close the report, either tap  to return to the *Maintenance* dialog or tap  to return to the main menu.



The Diagnostics report is automatically saved on the USB flash drive in two file formats: TXT and HTML. Each report follows a naming convention:

Autotest-YearMonthDay-HourMinuteSecond.

The date and time of the last diagnostics test, respectively in the "Day-Month-Year" and "Hour-Minutes-Seconds" formats are displayed in the *Diagnostics* panel. This information is not stored in the USB flash drive but in the instrument itself. When you format your USB flash drive, only the report(s) are deleted, not the date and time information. To remove them, you need to reset your personal settings (see [page 71](#)).

To open a report:

The series of three dots in the *Diagnostics* panel means that there is at least one report you can open.


1. Tap on Diagnostics Last Performed. The Diagnostics report appears.
2. Tap  to close the report and return to the *Maintenance* dialog or tap  to return to the main menu.

Advanced features


The Extended Range feature is an optional upgrade that increases the scanning range of your instrument to 340 meters.



To activate the Extended Range feature:

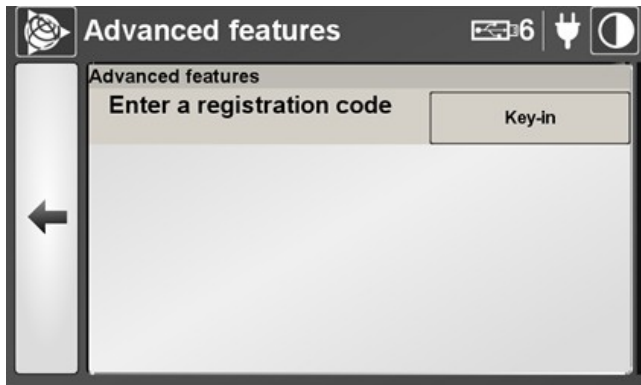1. In the *Advanced features* panel of the *Maintenance* dialog, tap > (see [page 67](#)). The *Advanced features* dialog appears:

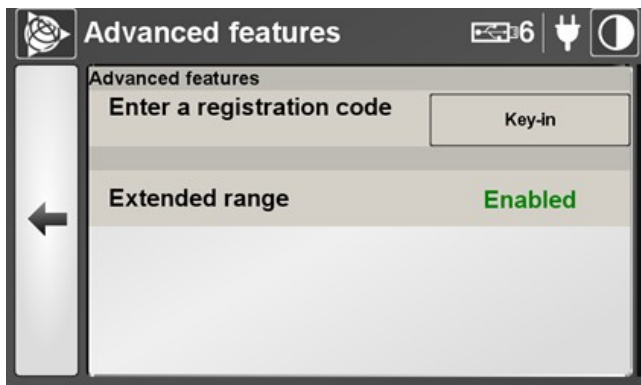

2. Tap **Key-In**. An on-screen keyboard appears.
3. Enter the Registration Code (for purchasing information, please contact your local Trimble authorized dealer).
4. Tap **OK**. The on-screen keyboard disappears. The Extended Range feature is now enabled.



5. Either tap  to return to the *Settings* dialog or tap  to return to the main menu.

Personal settings

1. In the *Personal settings* panel, tap **Reset**. The *Settings* dialog appears.
2. Tap **OK**. The following settings are reset to the default values.
 - The current unit for Length, Angle, Temperature, and Pressure resets to Meters, Degrees, Celsius, and mbar.
 - The Full scan's Density resets to Level 1.
 - The Area scan's Density resets to Level 1.
 - The last Operator Name resets to blank.
 - The PPM value resets to zero.
 - The Pressure value resets to 1013.25 mbar.
 - The Temperature value resets to 20 °C.
 - The last diagnostics test date.
3. Tap **OK** again.

Scanning Face


The Trimble TX8 scanner operates in dual-face or single-face scanning modes:

- Dual-face mode is the default setting and is recommended to reduce scan times. When the dual-face mode is enabled, a full 360° scan is captured with a 180° horizontal rotation.
- Single-face mode is only recommended if users notice a significant quality difference between the front and back face of dual-face scans, for example, lower density of points on areas with low reflectivity materials, lower maximum achievable range, severe brightness difference for objects above 50 m. This could be the result of extreme temperatures outside of the scanner's operating range or to abnormal shocks/vibrations.


Scanning with the single front or back face option may enable users to eliminate these quality differences. Scan times will be doubled with a full 360° scan, requiring a complete 360° horizontal rotation. You must select the best face for the job - either front or back. Check with a test scan where quality differences can be witnessed to ensure that the correct face is selected **before** continuing a project. Significant quality difference between faces can very rarely be witnessed in indoor conditions or below 50 m.

To set the scanning face mode:

1. On the *Settings* page, scroll down to *Scanning face* and then tap >:

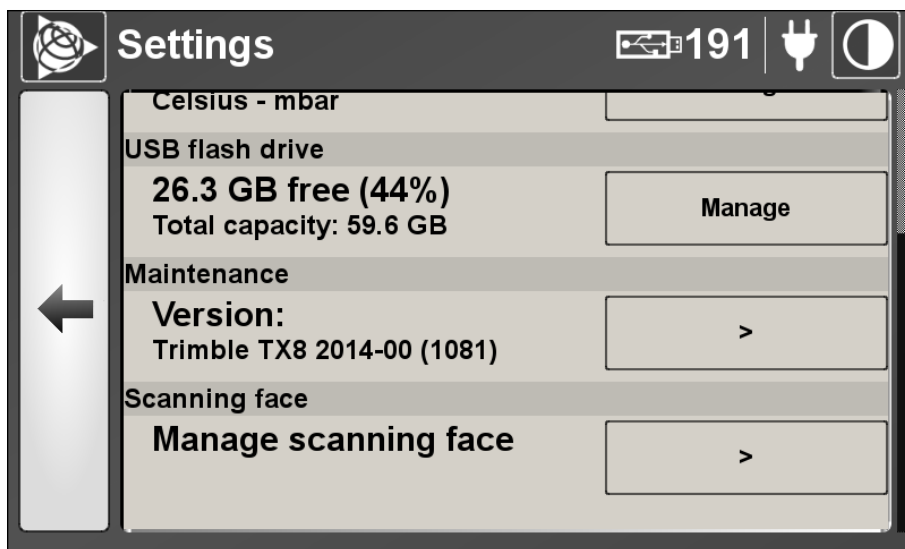

2. On the *Scanning Face* page, you can do the following:
 - To set the scanning face mode to *Dual face* (the recommended default setting), move the slider to the left position.

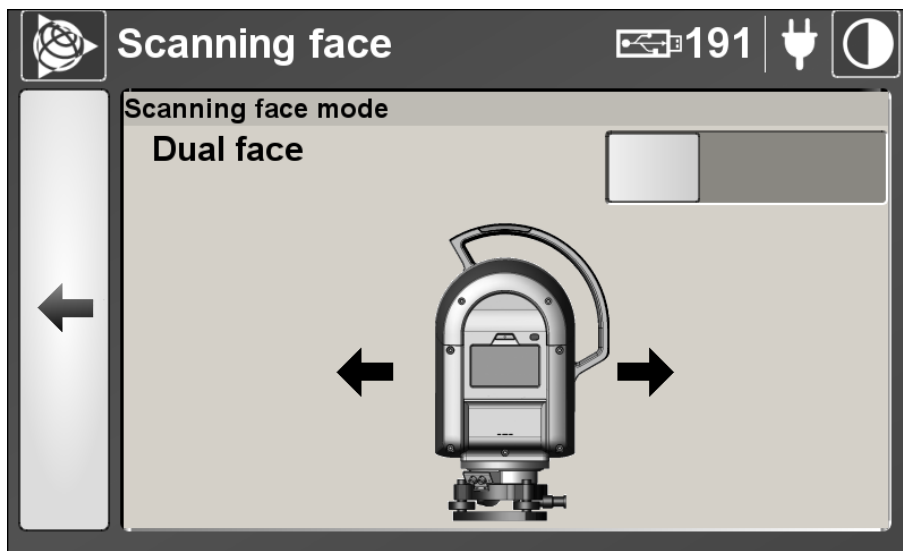

- To set the single-face scanning mode to *Front face*, move the slider to the middle position.




- To set the single-face scanning mode to *Back face*, move the slider to the right position.



Scan

After turning on the instrument, the touch screen on its right side illuminates.

To start scanning with the default parameters (Full scan, Level 1 as Density), tap .

The instrument first performs an initialization and then starts scanning. The Initialization phase occurs only once, after turning on the instrument.

Note – *If the Auto Level Check option is selected, the Checking Tilt phase takes place before the Initialization phase.*

Specifications

In this chapter:

- [Scanner only specifications](#)
- [Shipping box specifications](#)
- [Instrument case specifications](#)
- [External power supply specifications](#)
- [USB flash drive specifications](#)
- [Battery kit specifications](#)
- [Smart battery specifications](#)
- [Two-bay charger specifications](#)
- [Tribrach specifications](#)
- [Micro fiber lens cleaning cloth specifications](#)

This chapter summarizes the specifications of the TX8 3D scanner.

Scanner only specifications

Dimensions (W x H x D - scanner only)	335 mm x 412 mm x 242 mm
Volume (scanner only)	26921 cm
Weight	11.8 kg (without tribrach, battery, or USB flash drive)
Operation	<p>The Trimble TX8 3D scanner, is classified IP54 according to the international standard IEC 60529. It is a night and day scanner that can scan under the following conditions:</p> <ul style="list-style-type: none"> • Wet or dry weather (humidity range from 0% to 80%), • Hot or cold conditions (temperature range from 0 °C to +40 °C).
Maximum sound level	73 dB
Storage	The instrument can be stored inside its box at temperatures ranging from -20 °C to +50 °C.

Shipping box specifications

Dimensions (W x H x D)	475 mm x 720 mm x 595 mm
Weight	2.5 kg (empty)

Instrument case specifications

Dimensions (L x W x D - scanner only)	Exterior: 625 x 500 x 366 mm Interior: 559 x 432 x 322 mm
Weight	10.61 kg (with foam), 8.83 kg (without foam)
Temperature range	-29 °C to 60 °C

External power supply specifications

Dimensions (W x H x D)	130 mm x 76.2 mm x 43.7 mm
Weight	660 g
Cable length	Power cable connected to unit: 1.8 m Power cable provided with connectors: 2.1 m
Temperature range	-29 °C to 60 °C
Voltage	Input: 90 to 264 V AC Output: 12 V
Frequency	Input: 47 - 63 Hz

Current	Input: <ul style="list-style-type: none"> 90 W: 1.2 A at 115 VAC, 0.6 A at 230 VAC 120 W: 1.6 A at 115 VAC, 0.8 A at 230 VAC 150 W: 2 A at 115 VAC, 1.0 A at 230 VAC Output: 6.67 A
Temperature	Operating: 0 °C to +60 °C, derate linearly from 100% power at +40 °C to 50% power at +60 °C Storage: -40 °C to +85 °C
Cooling	Convection-cooled
Operating Humidity	5-95% RH, non-condensing
Operating Altitude	3000 m
Shock	30 g, 10 ms on 3 axe
Vibration	5 to 100 Hz, 2.31 m/s ² , 20 mins, 3 axes

USB flash drive specifications

Dimensions	74.99 mm x 23.29 mm x 15.90 mm (2.952" x 0.916" x 0.626")
Temperature	Operating temperature: 32 °F to 140 °F (0 °C to 60 °C) Storage temperature: -4 °F to 185 °F (-20 °C to 85 °C)
Capacity	64 GB
Formatting	FAT 32/16
Port compatibility	Usable with USB 3.0 and USB 2.0
Data transfer rate	<ul style="list-style-type: none"> USB 3.0: 225 MB/s read, 135 MB/s write USB 2.0: 30 MB/s read, 25 MB/s write

Battery kit specifications

Dimensions (W x H x D)	380 mm x 205 mm x 366 mm
Weight	5 kg

Smart battery specifications

Dimensions (W x H x D)	124 mm x 74 mm x 24.8 mm
Weight	652 g
Storage	The battery can be stored in temperatures ranging from -20 °C to +60 °C at up to 80% of relative humidity.

The optimal storage temperature is below 21 °C, in a cool, dry, and well ventilated environment. Storing a battery out of this range of temperatures may degrade its performance and reduce its life.

Two-bay charger specifications

Dimensions (W x H x D)	119 mm x 38 mm x 60 mm
Weight	500 g
Voltage	<ul style="list-style-type: none"> • Input voltage: 100 - 240 V AC • Output voltage: 24 V
Line frequency	50 to 60 Hz
Current	<ul style="list-style-type: none"> • Input current: 1.4 A (maximum) • Output current: 2.7 A
Output watt	65 W

Tribrach specifications

Dimensions (W x H x D)	65 mm x 37.5 mm x 140 mm
Weight	0.680 kg
Temperature range	Operating: -20 °C to +50 °C
Tripod connection	5/8"
Spirit level	8'/2 mm
Hysteresis	3cc (at 60 Ncm torsion moment and 12 kg vertical load)
Magnification	2x, erect image
Shortest focusing distance	0.35 m
Plumbing accuracy	0.5 mm/1.5 m
Eye-piece adjustment range	+/- 7 dioptre

Micro fiber lens cleaning cloth specifications

Dimensions	5" x 8" (rectangular)
Color	White or gray
Fabric	<p>Microfiber type: Suede (ultra fine)</p> <p>Microfiber weave: 80/20</p> <p>Edges: Unsewn - thermally welded</p> <p>Washable: Yes. Both sides can be used for cleaning.</p>
Shipping Weight	1 lb